



**SECTION 6**  
**PUBLIC FIRE HYDRANTS**

The primary purpose and function of a public fire hydrant is fire suppression. The District also uses public fire hydrants for water system operation and maintenance.

A fire hydrant will be installed, relocated, or removed when the following requirements have been met:

1. A written application for the installation, relocation, or removal has been received by the District;
2. The hydrant site has been approved by the responsible local fire jurisdiction; and
3. The charge for the hydrant installation, relocation, or removal, as set forth in the Schedule of Rates and Charges, has been paid in advance by the customer.

Fire hydrants installed under the preceding provisions shall belong to the District. The District shall bear the expense of performing hydrant maintenance resulting from normal wear and tear when such conditions are reported by the responsible local fire jurisdiction or when otherwise brought to the attention of the District.